

## FLE10-TSPA-AE00


**MB:**  
Mainboard

**Y1:**  
1st Solenoid valve

**M1:**  
Blowdown pump

**F1:**  
1st Fuse 2.5A

**F2:**  
2nd Fuse 2.5A

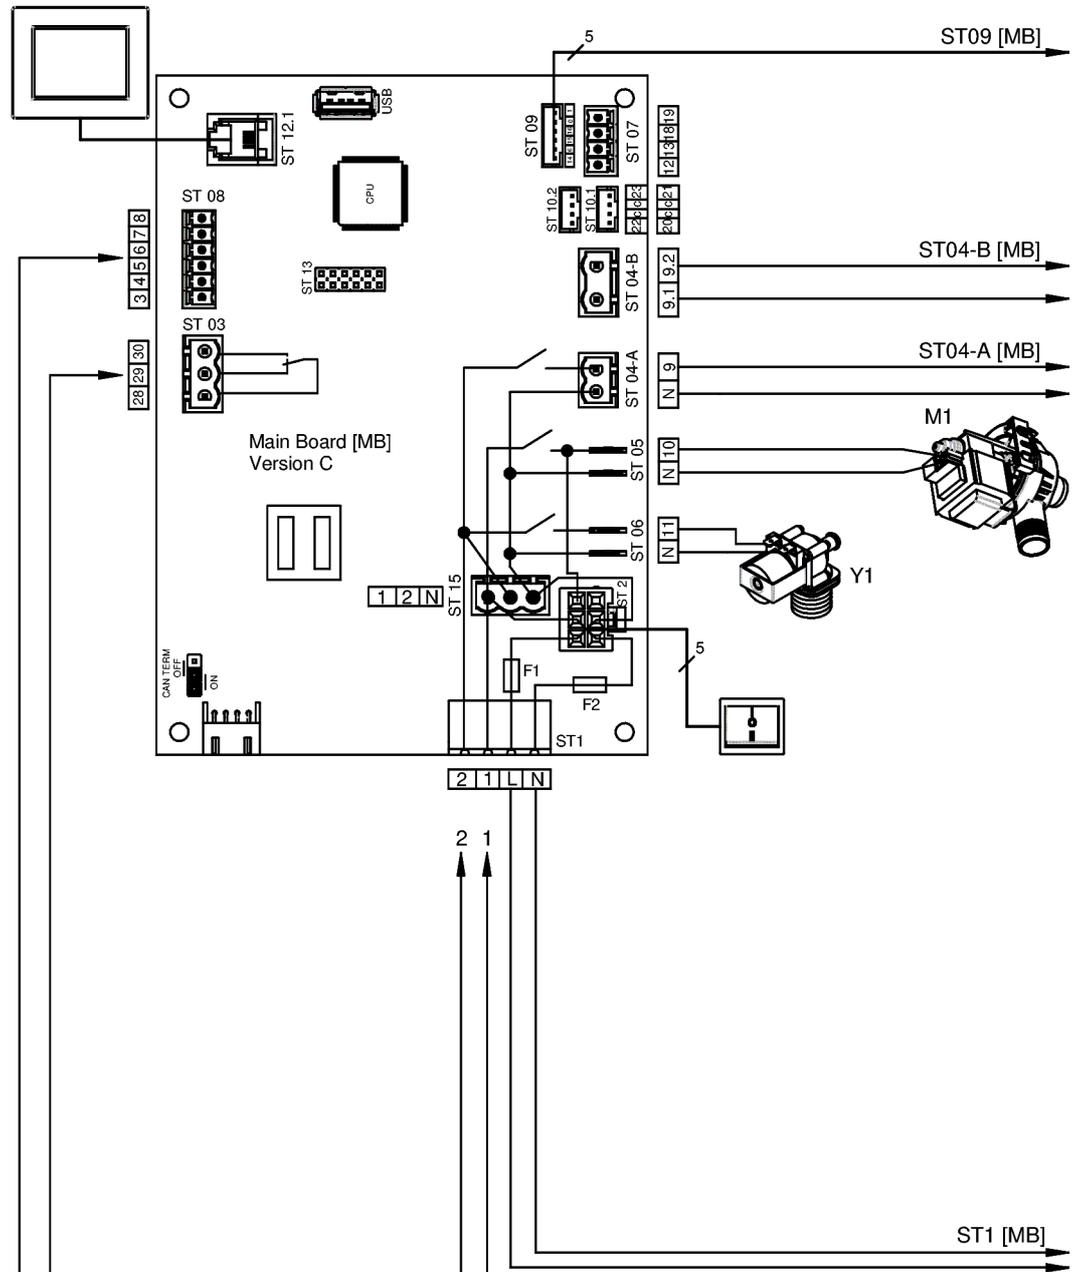

**ST08**

- |   |                            |
|---|----------------------------|
|  | 08: Digital input          |
|   | 07: Temperature sensor NTC |
|   | 06: Input mA               |
|   | 05: Input V                |
|   | 04: Ground                 |
|   | 03: Output 20VDC 30mA      |

**ST03**


- |   |                    |
|---|--------------------|
|  | 30: Normaly open   |
|   | 29: Normaly closed |
|   | 28: Common         |

**ST01\_1/2 Safety interlock**

Refer to manual  
Switch terminals 1 and 2 potential-free  
Terminal 1 230V 2.5A

**Connection customer side**

## FLE10-TSPA-AE00

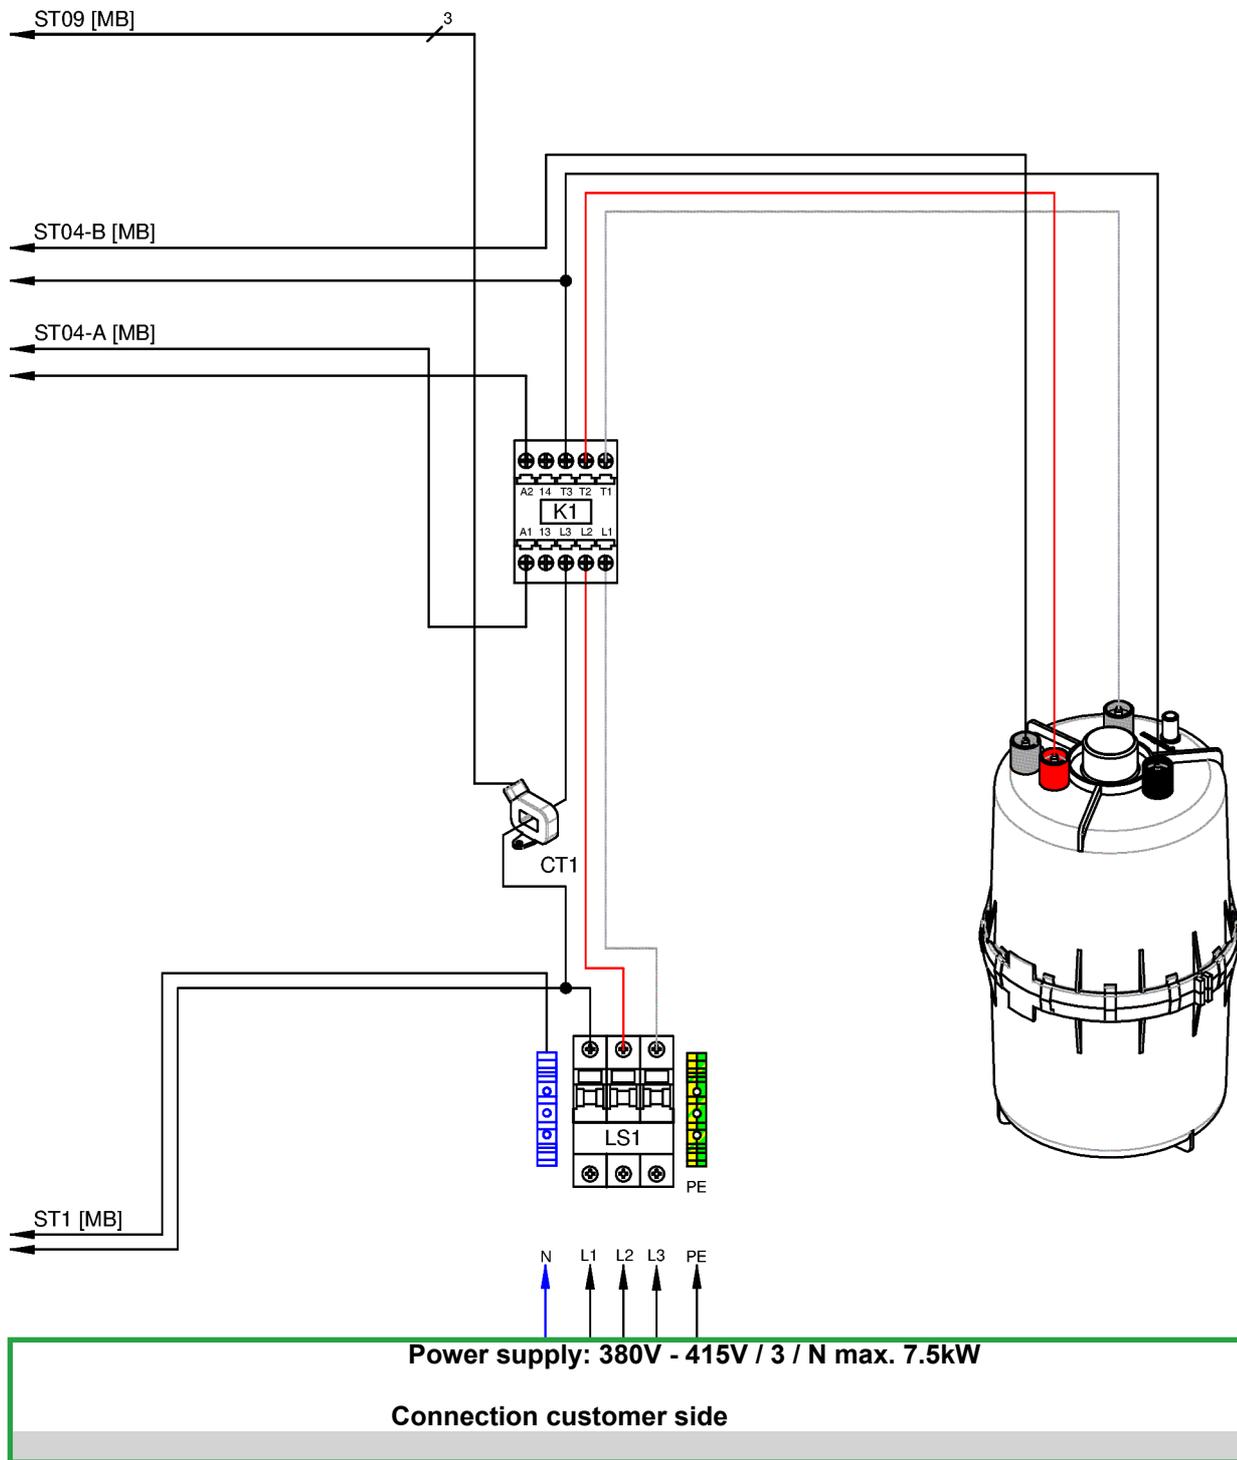

- K:** Main contactor or relay
- CT:** Current transducer
- LS1:** Circuit breaker B16.0A